


Box: PLOCK 2

BIKE	Peugeot Metropolis 400	PART NO.	RPG-102
YEAR	2013- Current	FIT KITS	Z039.10540
NOTES	Retain for future refernce, where not supplied use O.E fittings	FEATURES	DB Killer Z038.10553 (QQ)

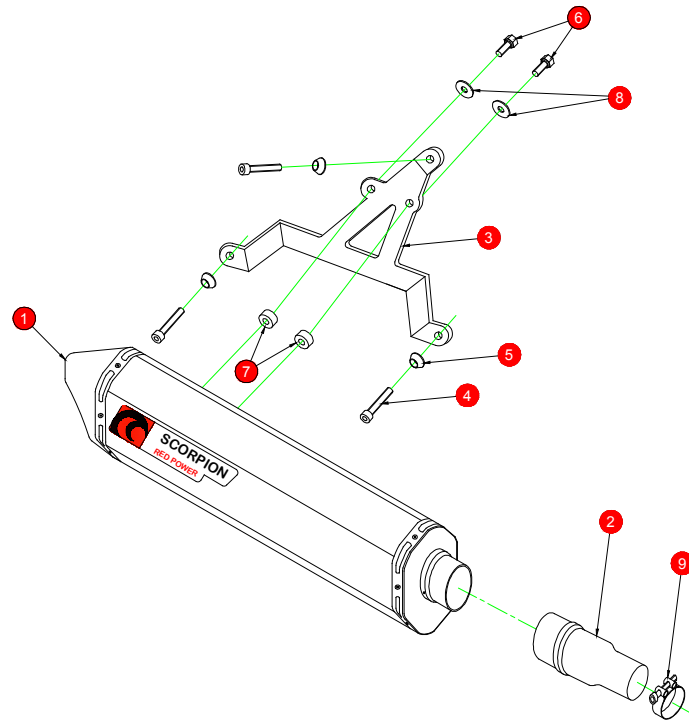

- |  |                                   |
|--|-----------------------------------|
| 1 400mm Serket Silencer RSC327           | 8 2 x M8x25mm Washer (Z017.10825) |
| 2 Connecting Pipe CP848                  | 9 40-43mm Clamp (Z016.10007)      |
| 3 Mounting Bracket (Z015.31253)          |                                   |
| 4 3 x M8x50mm Cap Head Bolt (Z017.10078) |                                   |
| 5 3 x Alloy Bolt Finisher (Z026.20068)   |                                   |
| 6 2 x M8x20mm Hex Head Bolt (Z017.10047) |                                   |
| 7 2 x M8x5mm Spacer (Z026.20049)         |                                   |

E-MARK	BSAU 193a 1990/t3
ISSUE NO.	1
DATE	13/07/15
AUTHORISED	T.ROWLEY
CHECKED	

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.